

MEDION®

MD 40570

DVD RECORDER

USER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT IN OUTLET AND ENSURE PLUG IS FULLY INSERTED.



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol warns the user of uninsulated voltage within the unit that can cause dangerous electric shock.



This symbol alerts the user that there are important operating and maintenance instructions in the literature regarding this unit.

CAUTION:
THIS DVD VIDEO RECORDER IS A CLASS 1 LASER DEVICE. USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

IMPORTANT SAFETY INSTRUCTIONS

Caution

READ THE SAFETY AND OPERATING INSTRUCTIONS before operating your DVD video recorder and retain the instructions for future use.

FOLLOW INSTRUCTIONS AND HEED ALL WARNINGS on the DVD video recorder and in this manual.


Installation

1. The power supply of this DVD recorder is AC100~240V, 50/60Hz, please don't use incorrect power outlets. If you are unsure of the power supply voltage, please ask your local electricity company.

2. For safety, your DVD video recorder is equipped with a 2-wire power cord. Please connect it only to a proper outlet.

If the plug does not fit, ask a qualified electrician to replace your obsolete outlet. Please do not modify the plug yourself. To do so will void this safety feature.


3. Arrange cords so that they will not be stepped on or pinched by anything placed on or against them. Especially be careful at plug-ins, receptacles, or cord exit points from the DVD video recorder. Frayed power cords or damaged plugs are hazardous, please ask a qualified service technician to replace your power cord in any of these cases.

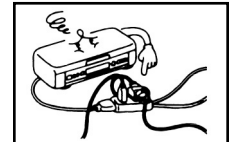

Overloaded power outlets and extension cords may cause fire or electrical shock hazards.

4. Do not cover or block the ventilation holes in the DVD video recorder cabinet. Doing so may damage the DVD video recorder or DVD video disc.

Do not place your DVD video recorder on a soft surface, the ventilation holes can be blocked from the bottom. Avoid placing it in a small space such as a bookshelf unless ventilation is adequate.

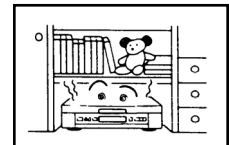

5. Avoid placing the DVD video recorder in an environment with excessive humidity, sudden temperature changes, or extreme hot or cold temperatures. Otherwise, condensation may form inside the unit.

6. To avoid accidental damage or injury, please place your DVD video recorder on a stable and flat surface with no vibration; do not put any heavy objects on top of it. Please use with a sturdy stand or table recommended by the manufacturer only; and follow all the instructions regarding the use of stands or tables.



7. Use care when moving the DVD video recorder on a cart. A sudden stop, excessive force or uneven surface may cause the cart to overturn.



8. Do not use any accessory that is not recommended by the product manufacturer.

9. Unplug this product from the wall outlet and contact Customer Care immediately under the following conditions:





- a) When the power cord or plug is damaged.
- b) If any liquid is spilled on, or object has fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally when you follow the instructions in the user manual.
- e) If the product has been dropped or damaged in any way.

IMPORTANT SAFETY INSTRUCTIONS

10. The product should be placed well away from any heat source such as a radiator, heater, stove, or any electrical home appliance that produces heat.

Operation/Cleaning

1. Keep your DVD video recorder away from strong magnetic objects.
2. Keep your DVD video recorder away from humid locations, such as bathtub, sink, laundry, humid basement, or swimming pool.
3. Use only with accessories recommended by the manufacturer in order to avoid fire, shock or other accident.
4. If your DVD video recorder is exposed to rain, placed in a wet area or struck by a strong impact, please unplug it immediately and contact Customer Care before turning it back on.
5. To protect your DVD video recorder during a thunder storm, or when it won't be used for a long period of time, please unplug it from the power outlet and disconnect the cable system. This will prevent possible damage to the product from lightning or power surges.
6. Unplug your DVD video recorder before cleaning. Use a damp cloth for cleaning. Do not use cleaning fluid or aerosol as they may cause damage, fire, or electrical shock if the liquid runs into the recorder. Those materials may also tarnish the coating of your DVD video recorder.
7. Never open or remove the cover or make any adjustment which is not described in the user manual as it may expose you to an electrical shock or other hazardous situation, or cause serious damage to your DVD video recorder. Your DVD video recorder must be serviced by a qualified technician only.
8. Keep any liquids or any unnecessary objects away from your DVD video recorder. Never turn on your DVD video recorder if any liquid or small metal object has entered the unit, or an electrical short, fire or electrical shock may result. In this case, please unplug your DVD video recorder immediately and contact Customer Care.
9. Remove the plug from the power outlet before cleaning. Use a damp cloth. Please don't use cleaning liquid or aerosol. Don't allow liquid to drip into the recorder, it may cause fire or electric shock. Cleaning fluids will erode the surface.
10. Power cord:
 - Always hold the plug when removing the power cord. Do not pull the cable.
 - Don't touch the power cord with a wet hand, it may lead to a short on circuit or you may get an electric shock.
 - Don't let items rest on the power cord.
 - Don't tie or knot the power cord.
 - Take care that the power cord is not tripped over or stepped on.
11. When the recorder is temporarily not in use, set the power to stand-by. If the recorder won't be used for an extended period, remove the plug from the power outlet.
12. **Emergency**
If the following occurs, unplug the unit and contact Customer Care immediately:
 - If liquid or metal drops into the unit.
 - If an abnormal playback status appears.

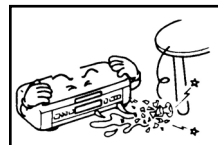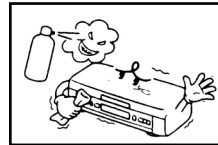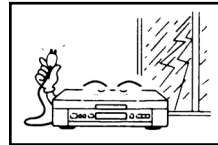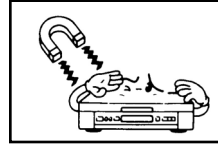


IMPORTANT SAFETY INSTRUCTIONS

Service

1. Do not attempt to fix this DVD video recorder yourself, please unplug it and contact Customer Care.
2. Make sure the technician uses manufacturer-recommended parts for replacement. Substituted may cause fire, electrical shock, or other hazardous situations.
3. Be sure the technician performs a complete safety check to ensure your DVD video recorder can be operated safely.

Laser Radiation

1. Please obey all operating instructions in this manual to avoid radiation damage.
2. The laser light in this machine can damage human eyes. Please don't open the case. If the unit needs service, please contact Customer Care.

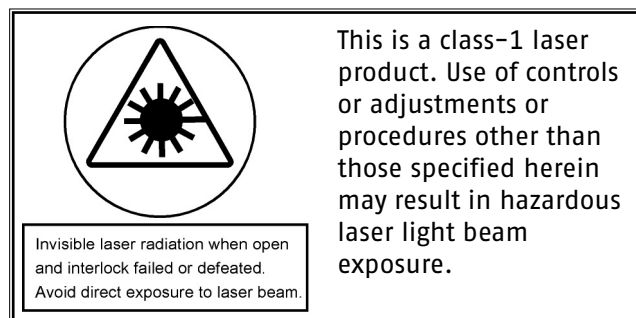

Condensation Warning

Condensation may form on the pickup lens under the following conditions.

- When a heater is turned on.
- In a steamy or very humid room.
- When the unit is suddenly moved from a cold to a warm environment.

If condensation forms inside the unit, it may not operate properly. If you suspect that condensation has formed in the unit, turn off the power and wait approximately one hour for condensation to evaporate.

Note to CATV System Installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part 1), which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Caution – FCC Notice

FCC/CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.


Outside Antenna

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to avoid touching such power lines or circuits because contact with them could be fatal.

IMPORTANT SAFETY INSTRUCTIONS

Grounding the Antenna System

If an outside antenna is connected to this equipment, be sure the antenna system is grounded in order to provide some protection against voltage surges.

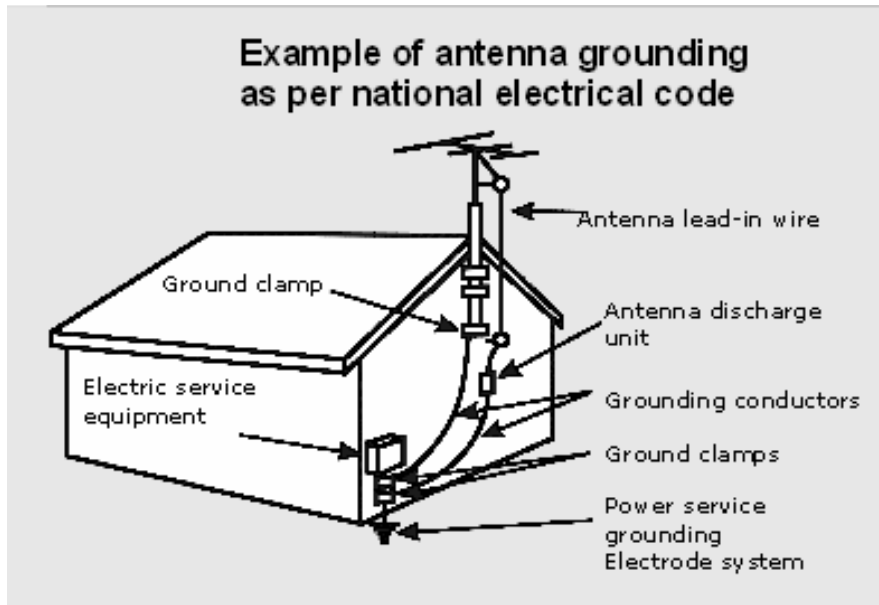


Disc Use

1. Take out the disc as shown to the right. Hold the edge and center of the disc. Don't touch the varnish side as this may damage the information on the disc.
2. Don't put stickers or labels on the disc surface. This will cause a weight bias on the disc and lead to abnormal playback.
3. Please don't scratch or spot the varnish side.
4. The rotational speed of the disc is very high. Please don't use any broken, scratched, cracked or bent disc or it will damage the DVD recorder.
5. Disc cleaning
Finger prints or dirty spots on the disc will reduce the reflection, which will lead to a poor signal. With a poor signal, the playing performance will decrease. Please use a soft cloth to wipe the disc straight from center to the outer edge. If the disc is too dirty, you can use a damp soft cloth to wet the disc first, and then wipe it with a dry soft cloth.
Never use cleaning liquid, methylbenzene, diluted formula, anti-static liquid or other solution for disc cleaning; it may damage the surface of the disc.
6. Storage of the disc
 - Put the discs in the original box to prevent bending or other damage to the disc.
 - Don't put the discs in areas with high temperature, high humidity or in direct sunlight.
 - Please read any instructions on the disc label carefully.



1

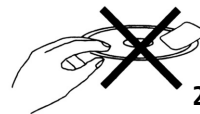


2



3



4

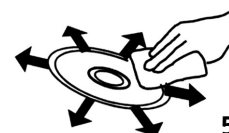

5

CONTENTS

Important Safety Instructions	3	Basic Playback Functions	23
Caution	3	Preparation:	23
Installation	3	Primary Settings	23
Operation/Cleaning	4	Start Playback	24
Service	5	Skip Playback	24
Laser Radiation	5	DVD	24
Condensation Warning	5	VCD/Audio CD	24
Note to CATV System Installer	5	Pause/Step	25
Caution – FCC Notice	5	Fast Forward/Rewind	25
Outside Antenna	5	DVD	25
Grounding the Antenna System	6	VCD/Audio CD	25
Disc Use	6	Slow Motion	25
		Stop	25
Contents	7	Disc Playback OSD (On Screen Display) 26	
Thank You...	9	DVD Playback OSD	26
...for Choosing This Product!	9	VCD/Audio CD Playback OSD	27
Features	9		
Package Contents	9	Advanced Playback Functions	28
Compatibility	10	Repeat Playback	28
Recommendations for		DVD	28
Optimal Picture Quality	10	VCD/Audio CD	28
Copy Protection	10	A-B Repeat Playback	28
Copyrights	10	Shuffle	29
Panels and Connections	11	Program Playlists	29
Front Panel	11	CD-DA, MP3, JPEG,	
Rear panel	11	VCD Program Playback	29
Basic (Composite) Connection	12	Cancel Programmed Playback	29
Other TV Connections	14	Display JPEG Photos	30
S-Video	15	Digest	30
Component Video	15	Title Playback	30
AV Amplifier/Receiver Connection	16	(DVD only)	30
Digital Audio	16	DVD Menu	30
Analog 5.1 Audio	16	(DVD only)	30
Connect to Other Video Inputs	17	Playing Multiple Angles	30
Connect a DV Camcorder	17	Change Subtitle Language	30
Connect a VCR or DVD Player	17	Change Audio Language	31
Tips	18	Direct Selection	31
		PBC Playback Control	31
Control Buttons and Display	19	Zoom	31
Front Panel Buttons	19	Bookmark Memory	32
Display Window	19	Create Bookmark	32
Remote Control	20	Jump to Bookmark	32
Remote Control Buttons	21	Clear Bookmark	32
		NTSC/PAL and Progressive Scan	32

contents

General Setup	33	Manual Disc Recording	41
Entering the Setup Menu	33	Pause recording	41
How to Setup	33	Recording from External Devices	42
Setup Menu Structure	33	Recording from a DV Camcorder	42
Language	34	Editing Discs	43
Aspect Ratio	35	Erase Whole Disc	43
16:9 (Wide)	35	(DVD+RW only)	43
4:3 (Letterbox)	35	Erase One Title	43
4:3 (Pan Scan)	35	(DVD+RW only)	43
Channel Search	35	Play Full Title	43
Add/Delete Channel	35	Edit DVD Compatibility	44
Audio Setup	36	Insert Chapter	44
Analog Output	36	Remove Chapter	44
Digital Output	36	Hide Title	45
Date and Time	36	Show Title	45
Parental Controls	36	New Picture	45
Password	36	Finalize a DVD+R	45
Factory Reset	37	Troubleshooting	46
Disc Media	37	Additional Information	50
Record Speed	37	Regional Code	50
Auto Chapter	37	Technical Specifications	50
Schedule	37	Glossary	51
Preparing Discs for Recording	38	Warranty	52
Compatible Discs	38		
Disc Types	38		
Initialize a New Disc	38		
Scheduled Disc Recording	39		
Scheduling a Recording	39		
Stop an In-Process			
Scheduled Recording	39		
Recording Quality	40		
Correct a Scheduled Recording	40		
Cancel a Scheduled Recording	40		
Troubleshooting			
Scheduled Recordings	40		

THANK YOU...

...for Choosing This Product!

Welcome to the latest in television technology. Your new DVD recorder features easy-to-use, on-screen menus and closed caption capabilities – all in a space-saving design. Quite simply, you've selected one of the best products in its class. We are proud to offer an LCD TV that will bring you convenient, dependable service and enjoyment for years to come.

This manual is provided to help you set up your DVD recorder and take advantage of its many features.

Keep this manual in a safe place for future reference. Record your product model number and serial number here, for use in event of loss or theft.

Model number:

Serial number:

Features

- This DVD recorder can play in NTSC and PAL under progressive or interlace scan output.
- This unit can be connected with a Dolby Digital or DTS compatible amplifier / receiver for home theater surround sound.
- Record cable or broadcast TV signal through the antenna, or record video and audio from an external input such as a DVD player or VCR.
- Schedule up to 8 separate recordings.
- This unit is equipped with an internal DV (digital video) input connector to connect with digital video camcorders. Movies can be transferred from a digital video camcorder to DVD+R/+RW.

Package Contents

- Remote control (includes 2 AAA batteries)
- Power Cord
- TV antenna cable
- Blank DVD+RW disc
- Video signal cable (composite, yellow connector)
- Audio signal cable (red and white connectors)
- S-Video cable
- Component video cable (green, blue, and red connectors)
- User manual

preface

Compatibility

- **Recordable Disc Types**
This unit can record to DVD+R and DVD+RW discs. Recorded discs may not be playable on all conventional DVD players.
- **Playable Disc and Media Types**
DVD Video, SVCD, DVD+RW, DVD+R, CD-R, DVD-RW, DVD-R, CD-RW, Audio CD, MP3, and JPEG.

Recommendations for Optimal Picture Quality

The unit is a precision device which is manufactured with highly accurate technology. Fingerprints or friction on the disc will affect reading from the laser pickup lens, and it will ruin the image quality. In the worst case scenario, neither video nor audio will be played from a dirty or scratched disc. To obtain optimum picture quality, the recorder should be cleaned after every 1,000 hours of use. Please note that this period may vary depending on the environment (temperature, humidity, dust, etc.). Please contact your supplier for details.

Copy Protection

This DVD video recorder supports Macrovision copy protection.
This will prevent copy-protected materials from being recorded normally.


Copyrights

- **Copyright**
The law prohibits copying copyrighted material without the permission of the owner of the copyright.
- **Copy protection**
If you attempt to copy a DVD disc with CSS protection code, the anti-copy protection function of your DVD recorder will be started to prevent illegal copying.
- **Notice**
One federal court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws. Certain Canadian programs may also be copyrighted, and any unauthorized recording, in whole or in part, may be in violation of these rights.

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.
DTS and DTS Digital Surround are registered trademarks of Digital Theater Systems, Inc.

PANELS AND CONNECTIONS

Front Panel

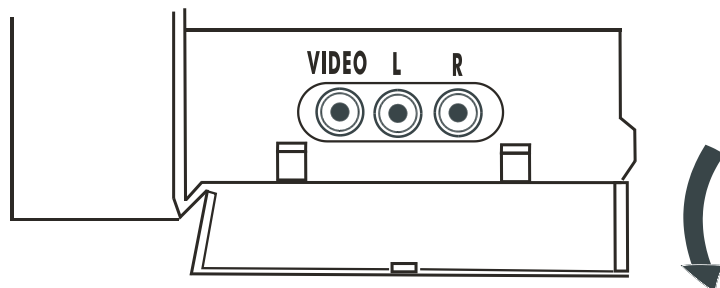


Open front panel

VIDEO: Composite video in for recording from external video equipment such as a camcorder.

AUDIO L/R: Standard stereo sound connections for recording from external equipment such as a camcorder. "L" stands for "left" and "R" stands for "right".

Rear panel

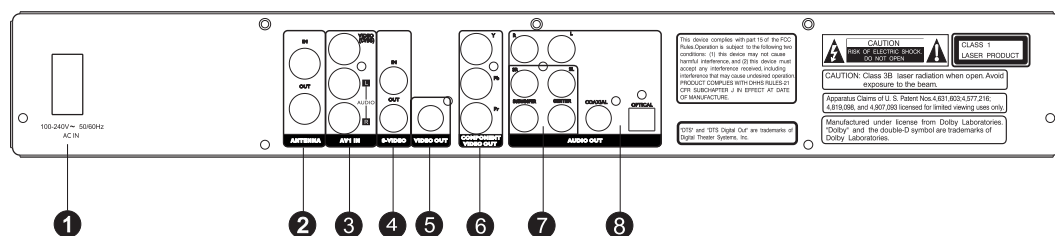

1. POWER CORD SOCKET.
2. ANTENNA: connect cable or TV antenna to "IN" and your TV to "OUT".
3. VIDEO IN / AUDIO IN: These jacks are the same as the ones on the front of your DVD recorder. Use them to connect to another video device that you wish to record, such as a DVD player or VCR.
4. S-VIDEO: For connecting to a TV or monitor's S-Video input jack.
5. VIDEO OUT: Video signal output.
6. COMPONENT VIDEO OUT: component signal output, for connection with a component (Y/CB/CR) or progressive scan (Y/PB/PR) device.
7. AUDIO OUT: analog audio output.
8. DIGITAL: Digital audio signal output connector for use with a Digital Audio Receiver/ Audio DA Converter.


panels and connections

Basic (Composite) Connection



Please unplug all devices from the power outlet before making or changing connections.

This chart shows the basic connections necessary for using your DVD recorder with a TV. Other types of connections are shown on the following pages. Before you get started, we recommend that you assess all of the equipment that you would like to connect and review the following pages closely.

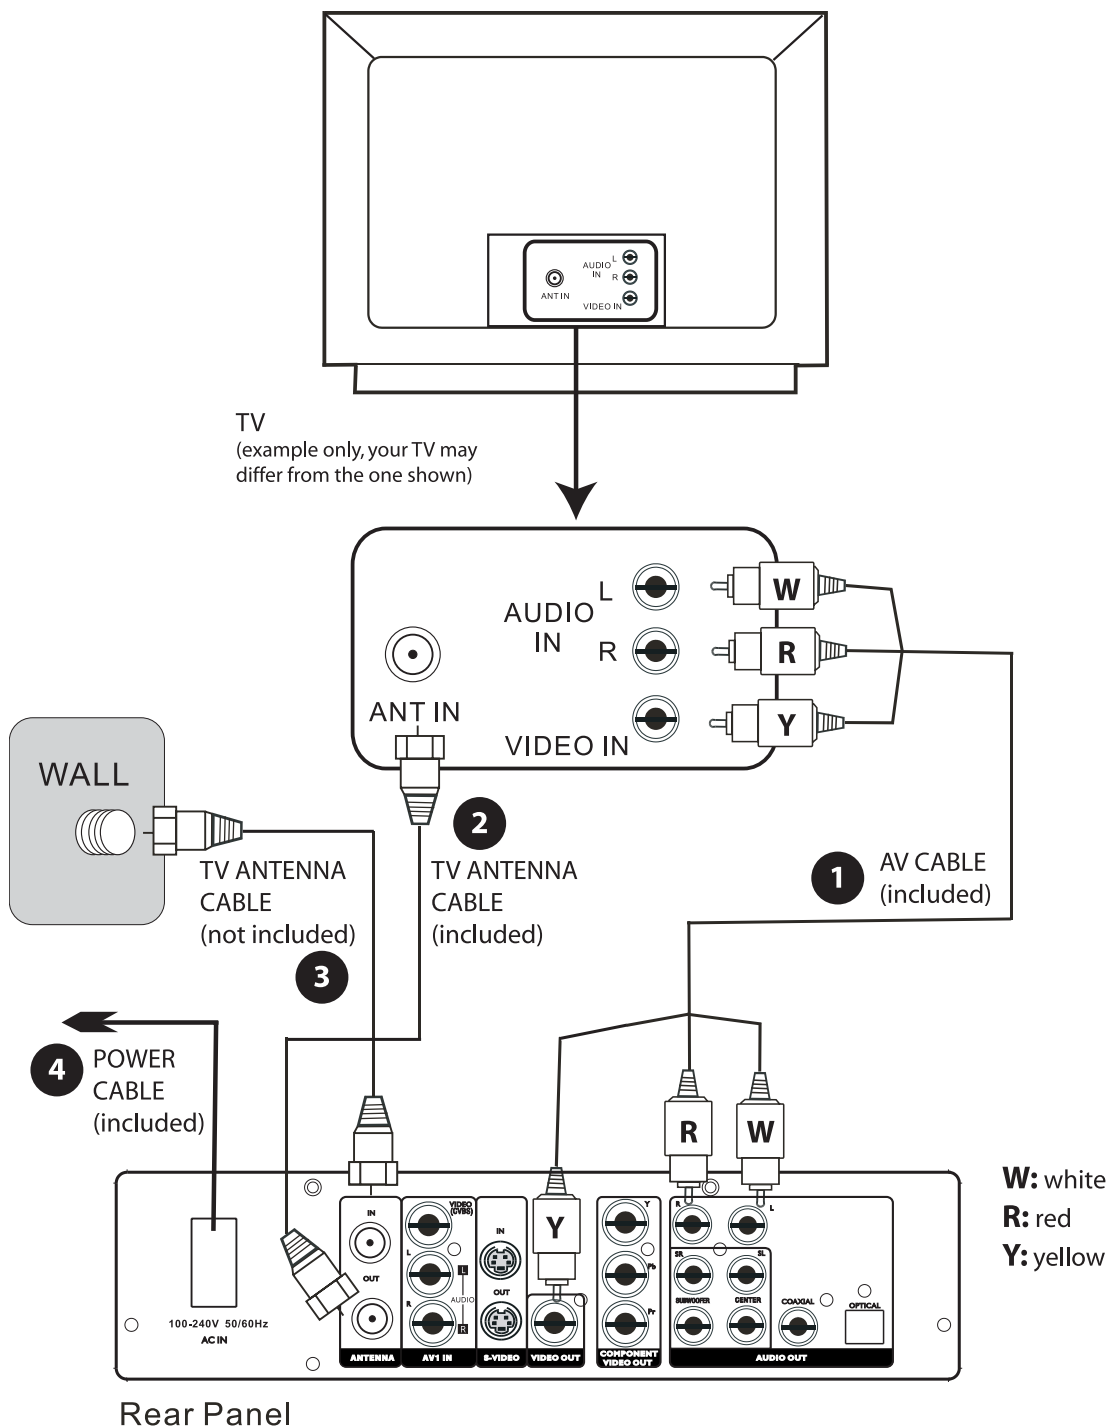

panels and connections

This DVD recorder is equipped with a standard composite (AV) video connection, S-Video connection, and component (YPBPR/ YCBCR) video input. Component provides the best picture signal, but is not available on all TVs. S-Video provides excellent quality, but not as good as component. Composite video provides good video quality, but it is not as good as S-Video or component.

Choose the best way to connect devices depending on your particular equipment.

For a basic (composite) connection, please follow the steps below using the diagram to the left as a guide.


- 1** Use the supplied AV cable (red, white, and yellow connectors) to connect the DVD recorder to your TV's AV input jacks.
- 2** Connect one end of the provided TV antenna cable to ANTENNA OUT on the DVD recorder. Connect the other end to the antenna (RF) input on your TV.
- 3** Use another TV antenna cable to connect the TV antenna or CATV coaxial cable from your wall outlet with ANTENNA IN on the DVD recorder.
- 4** Connect the power cord to an easily accessible AC outlet.

Please note that unlike some VCRs, the DVD recorder will not use the TV antenna connection to carry sound and video to your TV, although it will pass through the broadcast or cable signal provided by that connection. You must make a separate audio and video connection in order to watch DVDs played on your DVD recorder on your TV.

panels and connections

Other TV Connections

S-Video and Component Video connections carry only the video signal, not audio. To hear sound when using either of these connections, you will also need to make a separate audio connection. You can do this by connecting the red and white portions of the AV cable but NOT the yellow portion. This will play stereo sound through your TV (if your TV is capable of producing stereo sound). You can also follow the instructions on the following pages to connect your DVD recorder to an AV amplifier/receiver to send sound to external speakers.

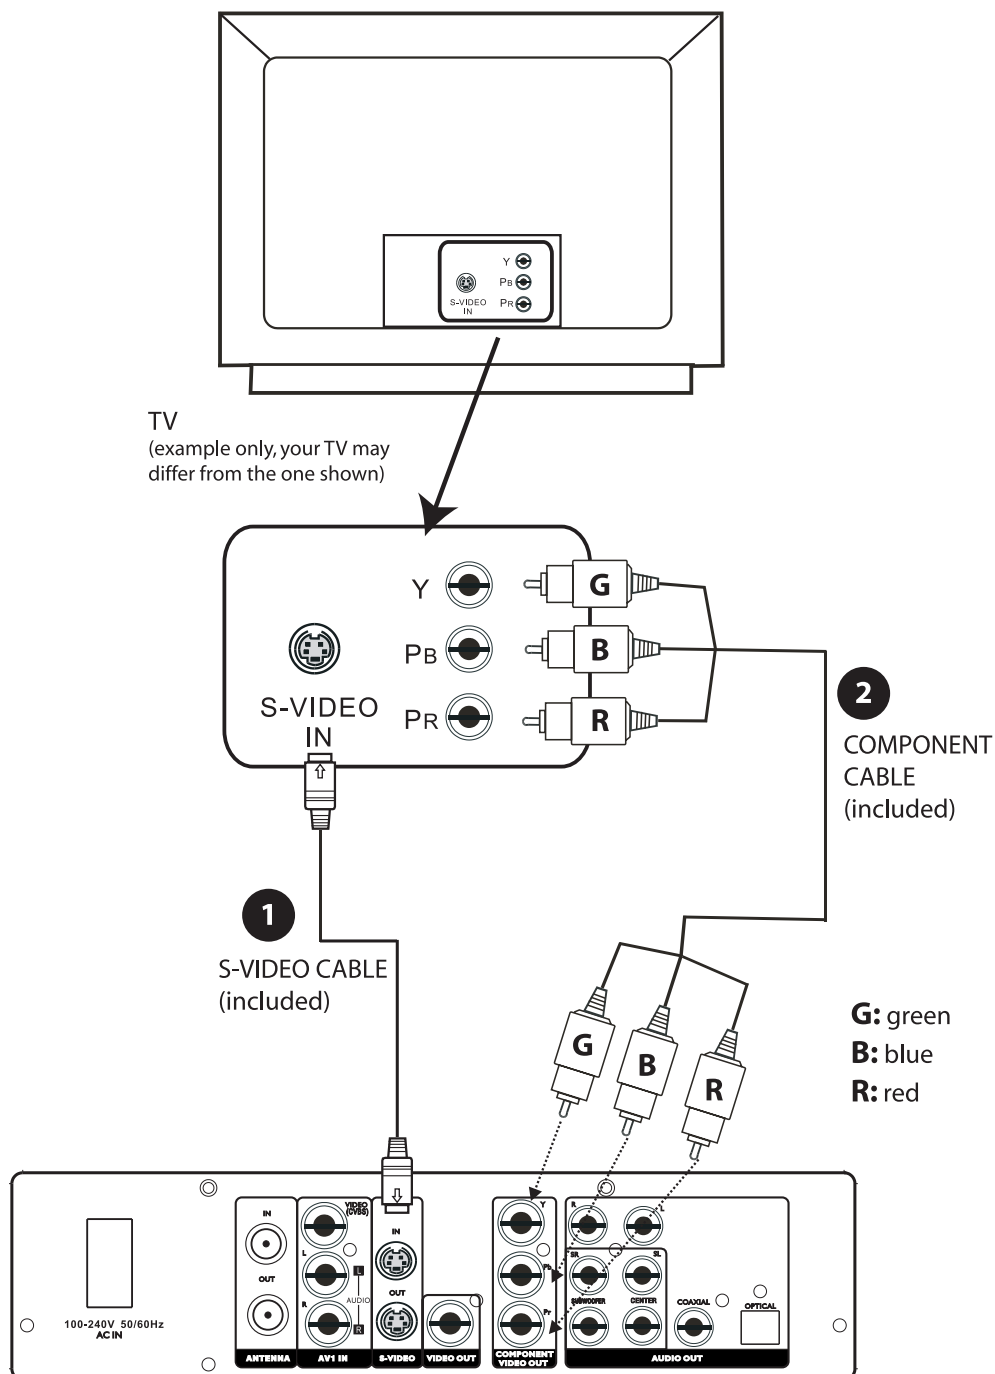

1 S-Video

There are 2 sets of S-Video output connectors for connection with a TV, monitor, VCR or other device.

Connect one end of the S-Video cable to one of the S-Video connections on the back of the DVD recorder, and connect the other end to the S-Video In jack on your TV.

2 Component Video

Connect the component cable (green, blue, and red connectors) to the COMPONENT VIDEO OUT on the rear panel of the DVD recorder and the corresponding component video in connections on your television. Make sure to match the colors on the cable connectors with the colors on the ports.



Connect EITHER the S-Video OR the Component Video cable to your TV. Not both.

panels and connections

AV Amplifier/Receiver Connection

The following connections are shown as an example only. Please choose the correct connections for your equipment. For example, you should use either an analog or a digital audio connection – not both. If you are using a digital connection, you should use either optical or coaxial – not both.

Digital Audio


- 1a** For an optical connection, connect an optical cable (also referred to as Toslink) to OPTICAL DIGITAL OUT on the DVD recorder and OPTICAL DIGITAL IN on the AV Amplifier or TV.
- 1b** For a coaxial connection, connect a coaxial digital audio cable to COAXIAL DIGITAL OUT on the DVD recorder and COAXIAL DIGITAL IN on the AV Amplifier or TV.

Analog 5.1 Audio

- 2** For analog audio, connect analog AUDIO OUTPUT and VIDEO OUTPUT on your DVD recorder to analog AUDIO INPUT and VIDEO INPUT on your AV Amplifier or TV.



Optical and coaxial digital audio cables sold separately.

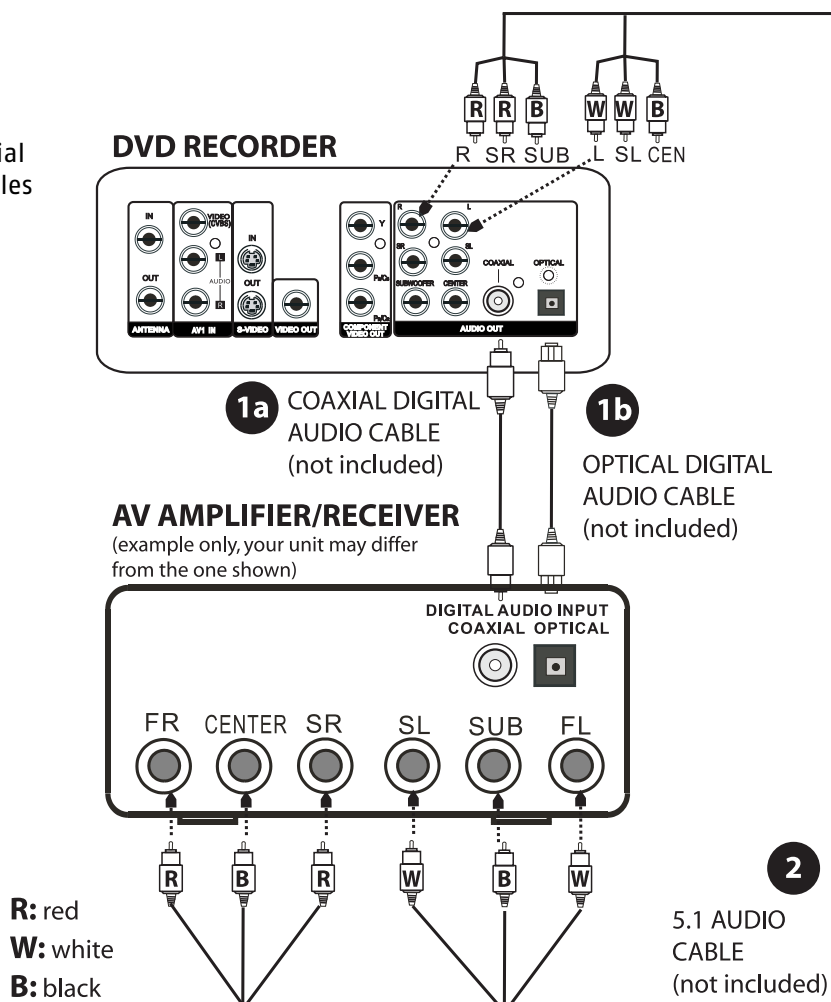

You must use the correct audio settings to avoid loud noise from your speakers. Please refer to Audio Setup on page 36.

FR: Front right speaker. Placed in front of the listener to his or her right.

Center: Center speaker. Placed directly in front of the listener.

SR: Surround right speaker. Placed behind the listener to his or her right.


SL: Surround left speaker. Placed behind the listener to his or her left.

SUB: Subwoofer. This speaker carries low frequency sounds and can be placed anywhere in the room as long as it is close to the ground.

FL: Front left speaker. Placed in front of the listener to his or her left.


Connect to Other Video Inputs

Connect a DV Camcorder

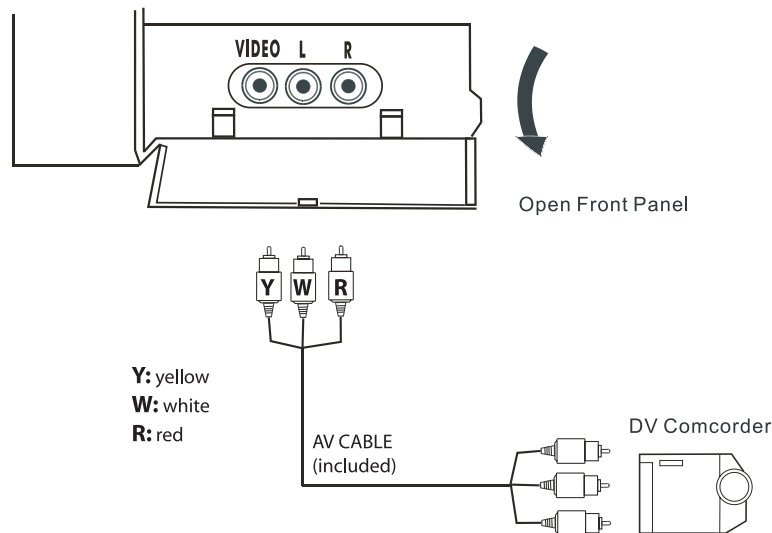

To record from a DV camcorder, connect the AUDIO/VIDEO OUTPUT from the DV camcorder to the DVD recorder's AUDIO/VIDEO INPUT on the front panel.

Connect a VCR or DVD Player

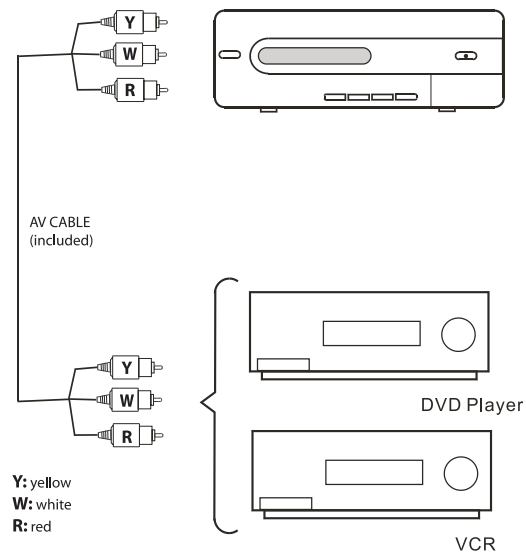

To record from a VCR or general DVD player, connect the AUDIO/VIDEO OUTPUT from the VCR or general DVD player to the AUDIO/VIDEO INPUT of the DVD recorder.

Do not connect your DVD recorder to a VCR and then connect the VCR to the TV. This will produce a very poor signal for your DVD recordings. Your DVD recorder should be connected directly to the TV for best results.


panels and connections

Tips

1. Most cables and AV connectors on your equipment follow a standard color code. Observing this color code can be very helpful when connecting your AV equipment.
2. We have provided many different options for audio and video connections so that you can choose the best for your needs. However, you only need one video connection and one audio connection between your DVD recorder and your TV.
3. If your antenna/CATV connection is attached to your DVD recorder, and your DVD recorder is attached to your TV with another antenna cable, you will be able to watch TV without turning on your DVD recorder.
4. Attaching your DVD recorder to a VCR and then attaching the VCR to the TV will produce very poor quality video and recordings. The DVD recorder should be attached directly to the TV.


CONTROL BUTTONS AND DISPLAY

Front Panel Buttons

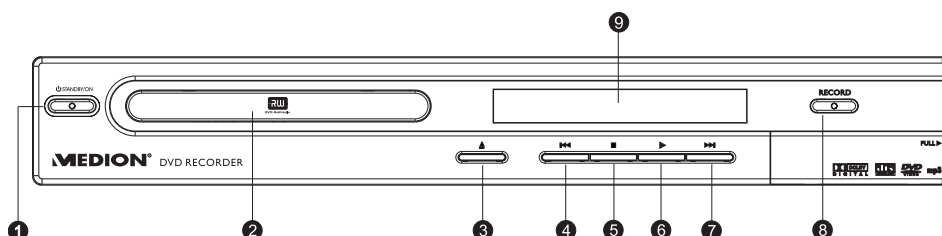

1. STANDBY/ON: Puts the unit in and out of standby mode.
2. DISC TRAY
3. OPEN/CLOSE : Opens and closes disc tray.
4. PREV : Jump to the previous chapter.
5. STOP : Stop playback/recording.
6. PLAY : Plays the current disc.
7. NEXT : Jump to the next chapter.
8. RECORD : Record currently playing channel/video.
9. DISPLAY WINDOW: Shows current status of DVD recorder.

Display Window


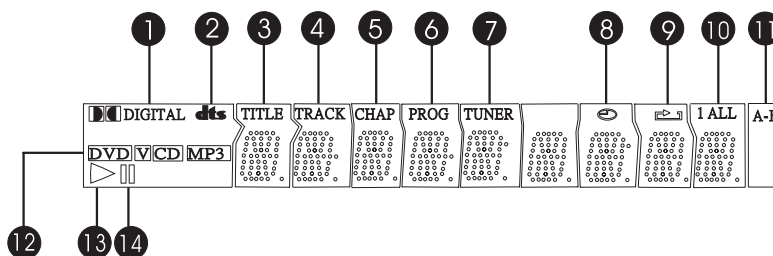


1. Dolby Digital sound display
2. DTS sound display
3. Title: Display the current title (DVD)
4. Track: Display the current track (VCD)
5. Chapter: Display the current chapter
6. The selected song in program
7. External input for recording
8. Start scheduled recording
9. Title in repeat play
10. A to B repeated playback
11. Channel from external AV amplifier
12. Display the disc type: DVD, VCD, MP3
13. Playback in progress
14. Play/record is currently paused

control buttons and display

 



 


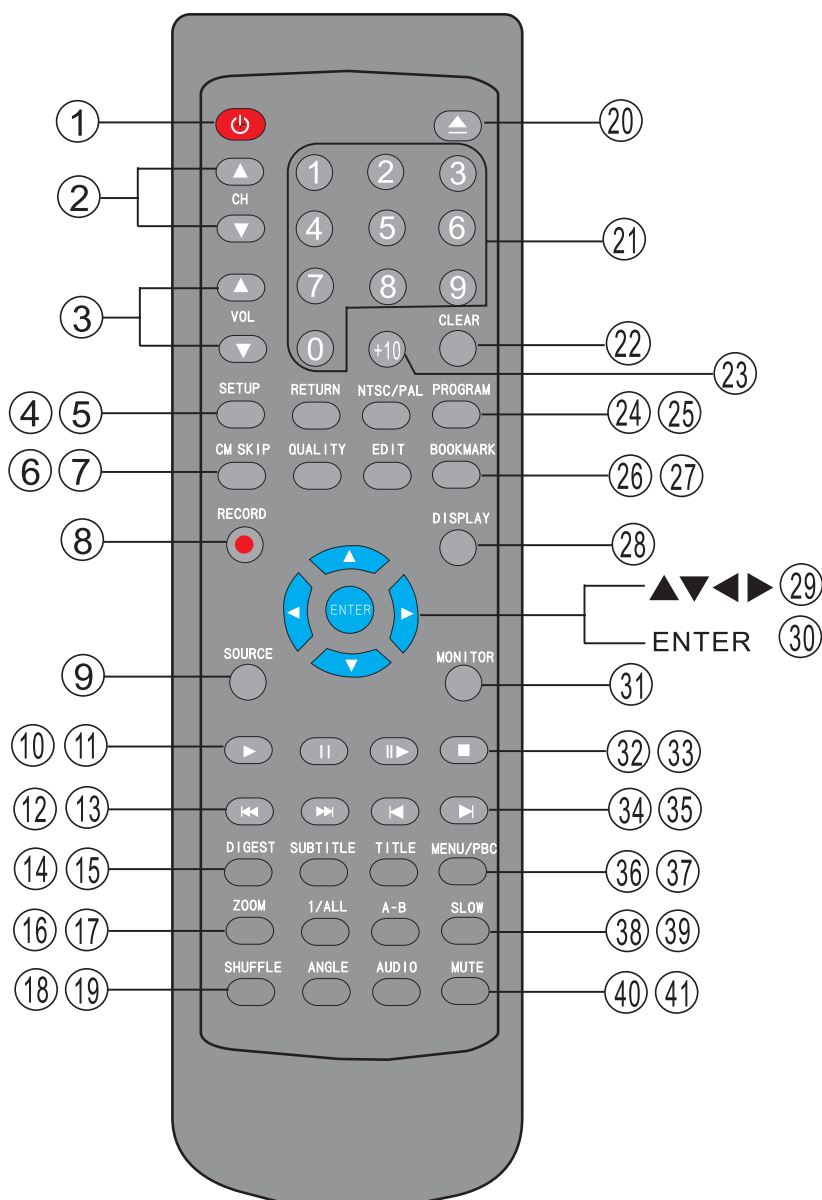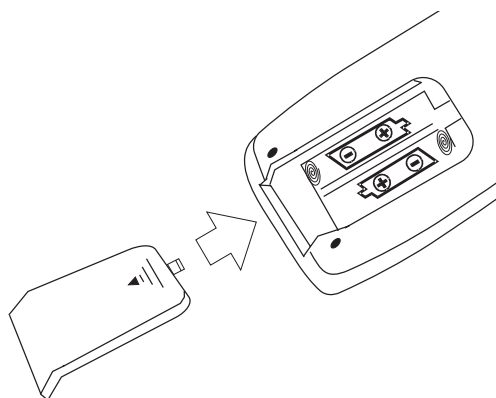




Remote Control

Before using the remote control, put 2 AAA batteries into the battery compartment. Please make sure the +/- terminals are placed correctly, following the instructions printed in the battery compartment. Point the remote control at the remote receiver on the DVD recorder.



control buttons and display

Remote Control Buttons

1. 	STANDBY/ON Puts the unit in or out of standby.
2. CH 	Choose the previous or next TV channel.
3. VOL 	Adjust the volume of analog audio output.
4. SETUP	Open setup menu (see page 33).
5. RETURN	When playing in VCD mode, press this button to return to the previous menu.
6. CM SKIP	Skip about 30 seconds of playback time on a DVD (a typical TV commercial length).
7. QUALITY	Choose the quality of recording (see page 40).
8. RECORD	Record the current channel.
9. SOURCE	Change to an external input signal for recording (see page 41).
10. PLAY 	Start playing the disc.
11. PAUSE 	Pause playback.
12. PREV 	Jump to the previous chapter.
13. NEXT 	Jump to the next chapter.
14. DIGEST	This button allows you to view JPEG CDs and some VCDs in a thumbnail mode with nine small images per screen (see page 30).
15. SUBTITLE	When playing a DVD with multiple subtitle languages, this button toggles languages or disables the subtitle function (see page 30).
16. ZOOM	Zooming mode in playback. (please refer to page 31).
17. 1/A	Repeat one chapter or all the titles in a disc (see page 28).
18. SHUFFLE	Random playback for CD/VCD (see page 29).
19. ANGLE	Choose a different view angle for playback (see page 30).
20. OPEN/CLOSE	Opens or closes disc tray.
21. 1,2,3...	For menu, song selection or for time, password input.
22. CLEAR	Press clear to erase the last number entered.
23. +10	Plus ten key. To enter "20", push +10 twice then the 0 button.
24. NTSC/PAL	Cycle between normal NTSC, NTSC progressive scan, and PAL (see page 32).
25. PROGRAM	Program playback of the disc (see page 29).
26. EDIT	When used with DVD+RW discs, this button shows the edit menu where you can erase titles and chapters (see page 43).
27. BOOK MARK	Bookmark memory setup (see page 32).
28. DISPLAY	Show status on screen (see page 26).
29. 	Use to move cursor up, down, left, and right in menus.
30. ENTER	Confirm selection of an item in the setup menu.
31. MONITOR	Toggle between external source (for recording) and DVD (for playback).
32. STEP 	Step (frame by frame) playback (see page 25).
33. STOP 	Stop playback.
34. REV 	Rewind.
35. FWD 	Fast forward.
36. TITLE	Display title menu of a DVD (see page 30).
37. MENU/PBC	Accesses available DVD (see page 30) or VCD PBC (see page 31) menus.
38. A-B	Loop playback between two points (see page 28).
39. SLOW	Slow-motion forward/reverse playback (see page 25).
40. AUDIO	If a DVD has more than one audio language, this button can select a language for playback.
41. MUTE	Cut out the analog sound output.

control buttons and display

- ① Please don't use different brands or types of batteries together. Don't use a new and an old battery together.
- ① If you find the remote distance is reduced, please change both batteries at the same time.
- ① If the DVD recorder won't be operated for an extended period, remove the batteries from the remote control. Otherwise the remote control may be damaged.
- ① Don't place the remote control in areas with high temperature or high humidity.
- ① Don't open the case of the remote control.

BASIC PLAYBACK FUNCTIONS

Preparation:

- ✓ See pages 12–17 for connection diagrams.
- ✓ Connect the DVD Recorder to the TV, turn on the TV power, and select the proper input on your TV (e.g., "AV").
- ✓ If connecting to an audio system, please turn the audio system on and make sure that it is connected correctly.
- ✓ The first time you power on this DVD recorder, please follow the on-screen instructions.
- ✓ Please note that an LED indicator will show when the unit is in standby (off) mode.

Primary Settings

This DVD recorder can be set easily by using the ◀ ▶ ▲ ▼ buttons. To make selections, move the yellow highlight bar to the desired item with the navigation buttons and then press **ENTER** to confirm.

1. When the DVD recorder is turned on for the first time, the TV screen shows the following message:

Choose English menus
De Choose German menus

Press<ENTER> to continue

Press the ▲ ▼ direction keys to choose the menu language, then press **ENTER** to confirm.

2. Time and date:

Please set the time and date:

AM/PM HH:MM AM 00:00
MM/DD/YY 00/00/00

Completed

Use the ◀ ▶ direction keys to move the cursor. Use the ▲ ▼ direction keys to change to the correct numbers. When you are finished setting the time and date, highlight "Completed" and press **ENTER** to confirm.

3. Selection of input signal:

Please select signal type:
Cable
Antenna
Skip

Use the ◀ ▶ direction keys to select the signal input source. Press **ENTER** to confirm or select "Skip" to complete this setting later.

The DVD recorder auto-searches the selected signal type to find channels. When finished, the screen shows:

Channel searching done!


 
To exit press <ENTER> key

4. Press **ENTER** to exit setup.



basic playback functions

Start Playback

1. Press **OPEN/CLOSE**  to open the disc tray.
2. Put the disc on the disc tray in the proper position and then close the disc tray
3. Press the **PLAY**  button to play the disc.



Some menu selections work only while the disc is being played.




In PBC playback on VCD, a PBC displays on the screen.



If there is no PBC function on VCD/CD, the disc plays immediately.

Skip Playback


DVD

Press **NEXT**  to skip to the next chapter.

CHAPTER 1

CHAPTER 2



Press **PREV**  to skip to the beginning or previous chapter.

CHAPTER 2

CHAPTER 1




VCD/Audio CD

With PBC on:



During VCD playback, press **TITLE** to bring up the PBC menu.

PLAYING

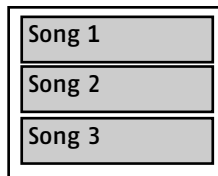VCD PBC MENU






With PBC off:

Press **NEXT**  or **PREV**  to skip to the next or previous section on a CD.




Pause/Step

Except for movies on CD, videos can be played frame-by-frame.




1. Press **PAUSE**  to pause the picture. While paused, press **STEP**  to advance to the next frame.
2. Press **PLAY**  to resume normal playback.

Fast Forward/Rewind

DVD

1. Press **FWD**  or **REV**  to speed up playback. Pressing the button multiple times cycles through the following speeds: **2x > 4x > 8x > 16x > 30x > 60x**.
2. Press **PLAY**  to resume normal playback.


VCD/Audio CD

1. Press **FWD**  or **REV**  to speed up playback. Pressing the button multiple times cycles through the following speeds: **2x > 4x > 8x > 16x**.
2. Press **PLAY**  to resume normal playback.



While rewinding or fast forwarding, you will not be able to hear the audio portion of the track.


Slow Motion



1. Press **SLOW** to slow down playback. Pressing the button multiple times cycles through the following speeds: **1/2 > 1/4 > 1/8**.
2. Press **PLAY**  to resume normal playback.





During slow-motion play, you will not be able to hear the audio portion of the track.

Stop

Press **STOP**  while playing a disc to temporarily stop (pre-stop) playback.

Press **PLAY**  to resume play from the point where playback was stopped, or press **STOP**  again to stop playback completely.

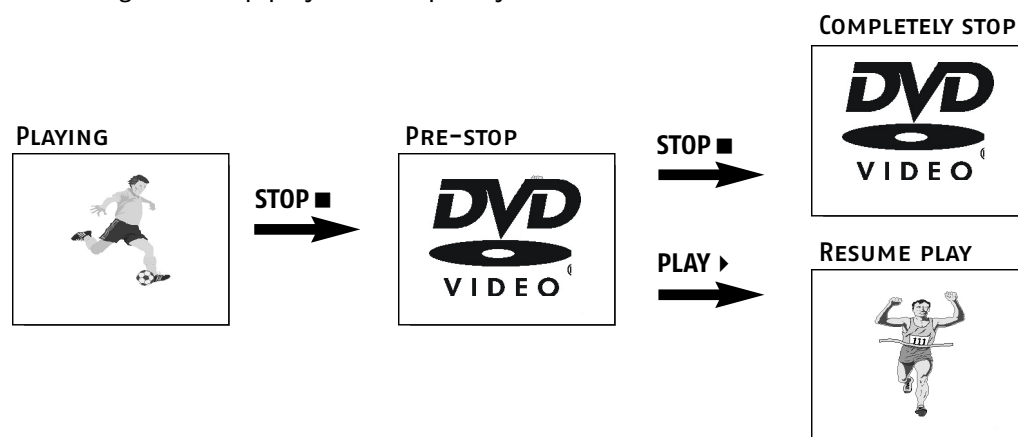


If you are finished using the DVD recorder, take out the disc and press  **STANDBY/ON** to turn the unit off.

DISC PLAYBACK OSD (ON SCREEN DISPLAY)

The OSD provides useful information about the disc that is currently being played, as well as quick access to commonly used menus.

DVD Playback OSD


Press **DISPLAY** on the remote control to show the following OSD information:

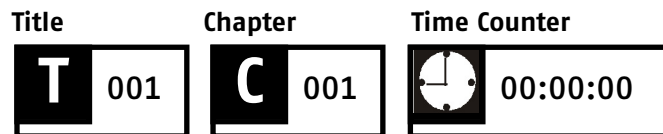


Audio channel selection




Subtitle selection

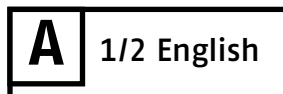

Random playback

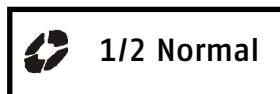

Repeat playback

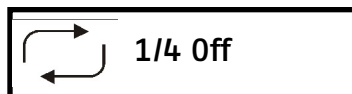

1. Not all of the OSD options appear on your screen at once. Use the ◀ ▶ buttons to move between display options, and to access the OSD options that are not currently shown on your screen.
2. Press **ENTER** to select the item that you would like to change. The menu item will turn yellow to indicate that you can change the settings.
3. Use the ▲ ▼ buttons to cycle through the available options. When the menu displays the option that you would like to select, press **ENTER** to confirm the setting. The menu item will turn white to show that your change has been entered.
4. Press **DISPLAY** again to exit the OSD display.

Title: If there are multiple titles on the DVD, this menu allows you to jump directly to a desired title.

Chapter: If there are multiple chapters on the DVD, this menu allows you to jump directly to a desired chapter.

Time Counter: The time counter allows you to begin playback at a specific point of time on the DVD.

Audio Channel Selection:

This allows you to set the audio language for playback. The languages available depend on the disc. Not all discs have multiple audio languages. You may need to use the disc menu to change audio languages – this depends on the design of the disc.


Subtitle Selection: This allows you to set the subtitle language for playback. The languages available depend on the disc. Not all discs have multiple subtitle languages. You may need to use the disc menu to change subtitle languages – this depends on the design of the disc.

Random Playback: When available, this menu allows you to choose between normal and random(shuffle) playback.

Repeat Playback: This menu allows you to choose between repeat playback settings. Please see the "Advanced Playback Functions" for more information about setting a disc to repeat.

VCD/Audio CD Playback OSD

Press **DISPLAY** on the remote control to show the following OSD information:

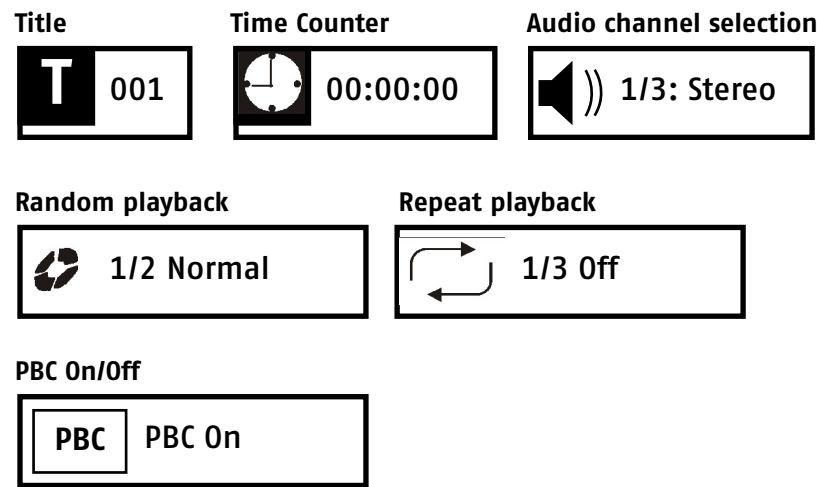

1. Not all of the OSD options appear on your screen at once. Use the ◀ ▶ buttons to move between display options, and to access the OSD options that are not currently shown on your screen.
2. Press **ENTER** to select the item that you would like to change. The menu item will turn yellow to indicate that you can change the settings.
3. Use the ▲ ▼ buttons to cycle through the available options. When the menu displays the option that you would like to select, press **ENTER** to confirm the setting. The menu item will turn white to show that your change has been entered.
4. Press **DISPLAY** again to exit the OSD display.

Title: If there are multiple titles on the DVD, this menu allows you to jump directly to a desired title.

Time Counter: The time counter allows you to begin playback at a specific point of time on the DVD.

Audio Channel Selection: This allows you to set the audio language for playback. The languages available depend on the disc. Not all discs have multiple audio languages. You may need to use the disc menu to change audio languages – this depends on the design of the disc.

Random Playback: When available, this menu allows you to choose between normal and random (shuffle) playback.

Repeat Playback: This menu allows you to choose between repeat playback settings. Please see the "Advanced Playback Functions" for more information about setting a disc to repeat.

PBC On/Off: Some VCDs have complex PBC menus. This menu allows you to turn the PBC functionality on or off. Your DVD recorder is easiest to control with the PBC function set to "Off".

advanced playback functions

ADVANCED PLAYBACK FUNCTIONS


Repeat Playback

Repeat playback lets you select a section of your disc to play in an endless loop.


DVD

1. Press **1/ALL** on the remote control to access the repeat function.
2. Press **ENTER** to enter select mode, then use the **▲ ▼** buttons to select how much of the DVD you would like to repeat:

NO REPEAT

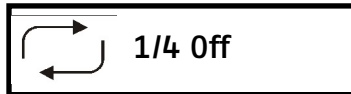


REPEAT CURRENT CHAPTER

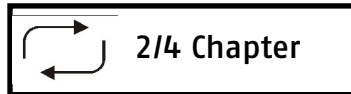

REPEAT CURRENT TITLE



REPEAT ENTIRE DISC

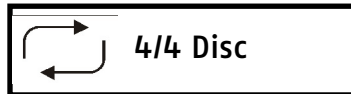


3. Press **ENTER** to confirm your selection. Press **1/ALL** again to exit.

VCD/Audio CD

1. Press **1/ALL** on the remote control to access the repeat function.
2. Press **ENTER** to enter select mode, then use the **▲ ▼** buttons to select how much of the DVD you would like to repeat:


NO REPEAT

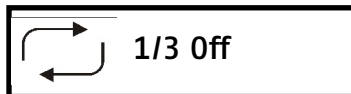

REPEAT CURRENT TRACK



REPEAT ENTIRE DISC

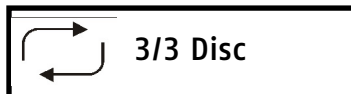


3. Press **ENTER** to confirm your selection. Press **1/ALL** again to exit.

A-B Repeat Playback

A-B repeat playback allows you to define a specific section of your disc to be played in an endless loop.


1. Rewind or fast forward your disc to the beginning of the section you want to repeat.
2. Press the **A-B** button to set up a start point (A). The on screen display shows:

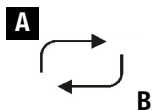

3. Fast forward or play to the end of the section you would like to repeat.

advanced playback functions

4. Press **A-B** again to set the end point. The OSD shows:

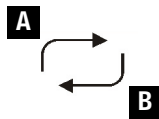

and the playback between your defined points begins.


3. Press the **A-B** button a third time to resume normal playback. No OSD is shown.

Shuffle

Shuffle is only available during VCD (PCB off) or CD-DA playback.

1. Press **SHUFFLE** to play the songs on a disc in a random order. The TV screen shows as follows:

NORMAL PLAYBACK

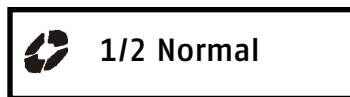

RANDOM PLAYBACK





2. Press **ENTER** to enter select mode, then use the **▲ ▼** buttons to make a selection.
3. When in shuffle mode, the OSD shows continuously on the screen.
4. Press **SHUFFLE** again to resume normal playback, no OSD shows on the screen.

Program Playlists

Programmed song playback can be used on ISO files, CD-DA or VCD (with PBC off) only.

CD-DA, MP3, JPEG, VCD Program Playback

1. Place your disc in the recorder. The recorder will automatically play the first file. Press **STOP ■**.
2. Press **PROGRAM** to enter the **PROGRAM LIST** screen (shown to right). The top window shows the tracks on your disc, and the bottom window shows the tracks in your playlist.
3. Use the **▲ ▼** buttons to select the desired song (file) then press **ENTER** to confirm your selection.
4. When you are finished with your playlist, use the **◀ ▶** buttons to highlight **PLAY** at the bottom of the screen. Press **ENTER** and the recorder will play your programmed list.
5. If you press **STOP ■**, your programmed songs (files) will remain programmed.

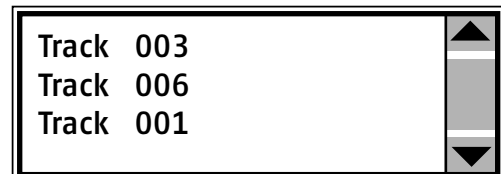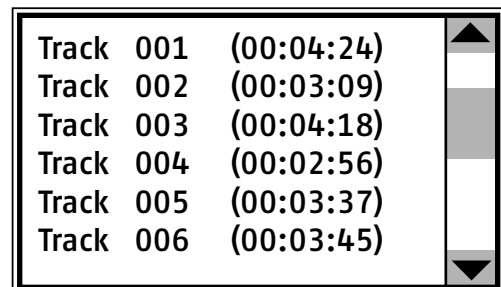


Cancel Programmed Playback

1. Choose **CLEAR ALL** to remove all programmed songs (files) from your playlist. This does not affect the songs or files on your disc.
2. Press **PLAY ▶** to resume normal playback.

advanced playback functions

Display JPEG Photos

When a disc with JPEG files is put into the recorder, it automatically plays the pictures as a slideshow. Press **STOP** ■ to end the slideshow and enter the track list screen at any time. Then you can use the ▲ ▼ buttons to choose a picture and press **ENTER** to show it in full screen mode.

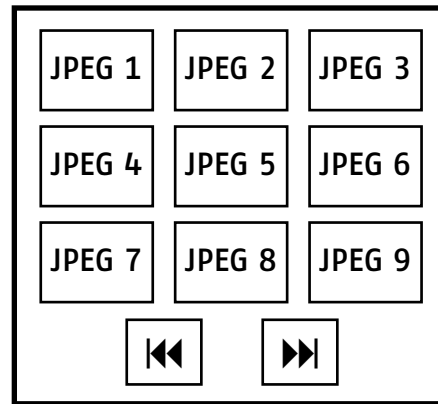

Digest

The digest screen can show 9 thumbnail pictures on your screen at once. It can help you to find a picture quickly.

1. Press **DIGEST** to enter the digest screen.
2. Use the ▲ ▼ ◀ ▶ buttons to choose a picture and press **ENTER** to show the picture in full screen mode.
3. Move the cursor to ◀◀ and press **ENTER** to jump to the previous page of thumbnails. Move the cursor to ▶▶ and press **ENTER** to jump to the next page of thumbnails.

Title Playback

(DVD only)

Some DVDs have a title menu that can be accessed using the **TITLE** button on your remote control.

1. While a DVD with a title menu is playing, press **TITLE**.
2. Use the ▲ ▼ buttons to select a title and press **ENTER** to confirm.

DVD Menu


(DVD only)

Some DVDs have complex content with many subtitle languages, audio languages, video angles, etc. The DVD menu can be used to access these features.

1. If the disc contains a DVD menu, press **MENU/PBC** to show the menu on the screen.
2. Use the ▲ ▼ buttons to make a selection and press **ENTER** to confirm.

Playing Multiple Angles

Some DVDs have multiple angle video segments.

1. When a DVD section with multiple view angle is playing, the screen shows: 
2. While this icon is showing, press **ANGLE** to cycle through the available viewpoints.

Change Subtitle Language

When playing a DVD with more than one subtitle language, press **SUB-T** to change or cancel subtitles.

1. Press **SUB-T** to cycle between available subtitle languages and subtitles off.
2. The screen shows the subtitle language's number. Press **ENTER** to confirm. Press **SUB-T** again to hide the subtitle message.



Some subtitle languages can be only be selected from the DVD menu and can not be changed with the SUB-T button. Subtitle availability depends on the design of the DVD.

advanced playback functions

Change Audio Language

If a DVD has more than one audio language, press **AUDIO** to change between them.

1. Press **AUDIO** to cycle through available audio languages.
2. The screen shows the audio language's number. Press **ENTER** to confirm your selection. Press **AUDIO** again to hide the screen message.



Some audio languages can be only be selected from the DVD menu and can not be changed with the SUB-T button. Audio language availability depends on the design of the DVD.

Direct Selection

When a DVD, VCD or Audio CD is playing, press the numeric keys on the remote control to jump directly to a specific chapter or song for playback.

To enter double-digit numbers, press the **+10** button. For example, to enter "32" press **+10**, then **3**, then **2**.


PBC Playback Control

Only VCDs edition 2.0 or above have this function. Different VCDs will have different PBC functions, depending on the design of the disc. Please refer to the instruction manual for the disc for more information.

1. Press **MENU/PBC** to turn on/off the PBC function. The OSD shows "PBC on" or "PBC off".
2. If the VCD has a PBC menu, press **PREV** and **NEXT** to change pages in the menu.
3. In PBC menus, all selections must be made with the numeric buttons.
4. When playing VCD 2.0 edition discs, set PBC to "off" for optimal operation.
5. When PBC is on, press **TITLE** to enter the PBC menu.

Zoom

1. When playing a DVD or VCD, press **ZOOM** to cycle through the zoom settings: **x2 > x4 > x8 > NORMAL**.
3. An inset screen in the upper left corner shows the entire viewable area.
2. While zoomed, use the **◀ ▶ ▲ ▼** buttons to move the zoomed portion within the viewable area.

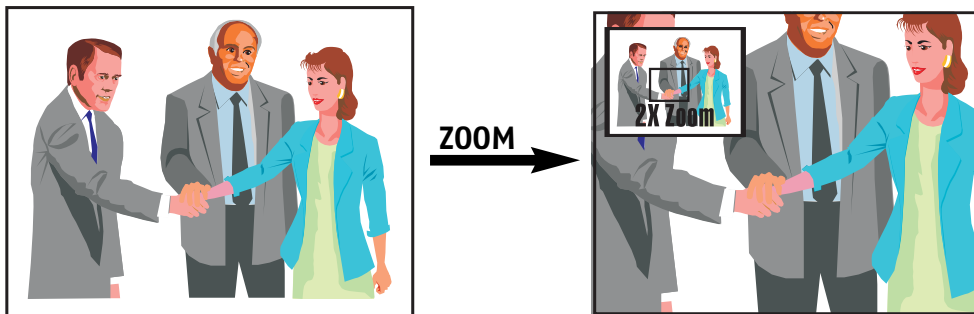


advanced playback functions

Bookmark Memory


This unit supports 5 separate stored bookmarks for the disc currently in the DVD recorder. When you remove the disc from the recorder, the bookmarks are lost.

Create Bookmark

1. While playing a disc, press **BOOKMARK** at the point you wish to bookmark. The Bookmark menu shows on screen as follows:

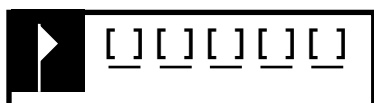

2. The five lines indicate the five slots that the unit has for memory. A number indicates that a bookmark is stored in that slot. If there is nothing above the line, then there is nothing stored in that slot.
3. Use the **▶** button to move to an empty slot.
4. Press **ENTER** to memorize the present point as a bookmark. A number will appear in the bookmark space, indicating that you have successfully stored the bookmark.

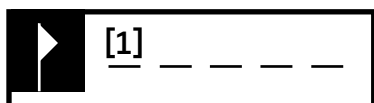

5. Press **BOOKMARK** again to exit the bookmark menu.

Jump to Bookmark

1. Press **BOOKMARK** to enter the bookmark menu.
2. Use the **◀ ▶** buttons to select a bookmark.
3. Press **ENTER** to start playback from that bookmark point.

Clear Bookmark

1. Press **BOOKMARK** to enter the bookmark menu.
2. Use the **◀ ▶** buttons to select a bookmark.
3. Press **CLEAR** to erase the selected bookmark from memory.

NTSC/PAL and Progressive Scan

The NTSC/PAL button cycles between normal NTSC, NTSC progressive scan, and PAL viewing modes.

NTSC is the normal format for North American TV broadcasts.

NTSC Progressive Scan can be used with a component connection to a TV that supports progressive scan to watch DVD movies at a higher resolution.

PAL is the color format for Europe and other areas. If you select PAL, North American movies and television programs will appear incorrectly on your screen.

Please see the glossary on page 51 for more information.

GENERAL SETUP

Entering the Setup Menu

Press **SETUP** on your remote control to enter the setup menu.



If you press **SETUP** during playback, playback will pause. It will resume when you exit the Setup menu.

How to Setup

1. Press **SETUP** to enter the setup menu.
2. Use the **▲ ▼** buttons to make a selection and press **ENTER** to enter into the first sub-menu.
3. In the first sub-menu, use the **▲ ▼** buttons to make a selection. Press **ENTER** to enter into second sub-menu, or press **◀** to return to the previous page.
3. In the second sub-menu, use the **▲ ▼** buttons to make a selection and press **ENTER** to confirm your selection.
4. Press **SETUP** again to exit the setup menu.

Setup Menu Structure

Items in bold are the factory default setting.

1.Language	1.OSD	English
		German
	2.Menu	Default
		English
		Spanish
		French
	3.Audio	Default
		English
		Spanish
		French
	4.Subtitles	Off
		Default
		English
		Spanish
		French
2.Video Setup	1.Aspect Ratio	16:9 Wide
		4:3 Letterbox
		4:3 PanScan
	2.Channel search	Antenna
		Cable
	3.Add/Del channel	
	4.Cable/Antenna	Antenna
		Cable

general setup

3. Audio Setup	1. Analog Output	Surround +5.1 LR Stereo
	2. Digital Output	D-PCM Dolby Digital
4. System Info	1. Date and Time	
	2. Parental Controls	1. G 2. 3. PG 4. PG 13 5. 6. R 7. NC 17 8. NO Limit
	3. Password	
	4. Factory Reset	Confirm Cancel
5. Disc Media	1. Finalize	
	2. Erase	Confirm Cancel
6. Recording	1. Record Speed	HQ SP LP EP SLP
	2. Auto Chapter	On Off
7. Schedule		

Language

There are four items for which you can change the language: OSD, MENU, AUDIO, SUBTITLES.

The OSD (on screen display) can be displayed in English or German.

The Menu, Audio, and Subtitle languages available depend on the disc that you are playing. If the disc has a default setup for audio language and subtitle language, this recorder will play them automatically.

Aspect Ratio

The following aspect ratios are available for playback:

16:9 (Wide)

Use this for 16:9 wide screen TV video output.

4:3 (Letterbox)

Use this to display full 16:9 video footage on a 4:3 TV screen. Black bars will appear at the top and bottom of the screen.

4:3 (Pan Scan)

Use this for watching typical 4:3 TV broadcasts on a 4:3 television. If you do not like the black bars produced by watching 16:9 video footage in letterbox mode, you can watch them in 4:3; however, the sides of the image will be cropped to fit your screen.

See instructions on the DVD that you want to play for more information.

Channel Search

You must perform a channel search in order for the DVD recorder to recognize your broadcast or cable channels for display and recording. If you did not perform a channel search during initial setup, you can do it here.

Add/Delete Channel

You can delete channels after performing a channel search, or add channels that have been previously deleted. First move to the channel that you want to add or delete. If the channel has been previously deleted, you may need to use the numeric buttons to directly enter the channel number.

If the channel is not already memorized by your DVD recorder, selecting Add/Delete will add it to the memory. If the channel has already been memorized, then selecting Add/Delete will delete it from your DVD recorder's memory.

general setup

Audio Setup

In order to play surround sound, the audio setup must be selected correctly and the DVD recorder has to be connected with an AV Amplifier/ Receiver. You must set the DVD recorder correctly to ensure the digital audio signal format is compatible with the amplifier/receiver.



If you send an incompatible digital signal to an AV Amplifier/Receiver, it may cause noise from the loudspeaker. This could damage your loudspeakers.

Analog Output

Surround +5.1: Use this setting for analog surround sound connections.

Stereo: Outputs analog sound in standard stereo (two channel).

Digital Output

Use the following mode to connect the digital sound signal from this recorder to an external amplifier.

D-PCM: D-PCM outputs the same type of format that CDs are usually recorded in. Use D-PCM for digital sound output in stereo (two channel) as opposed to surround sound.

Dolby® Digital: Recorder outputs Dolby® Digital or DTS® digital audio in surround sound.

Date and Time

Before scheduling any recordings, the time must be set as follows.

1. Highlight **DATE AND TIME** and press **ENTER** to enter setup.
2. Use the ◀ ▶ buttons to move the cursor, and use the ▲ ▼ buttons to modify the time and date.
3. After you have entered the correct time and date, press **ENTER** to confirm setup. The screen switches to the previous setup page automatically. Press **SETUP** again to exit the setup menu.

Parental Controls

This function allows you to set limits on the content that can be displayed using your DVD recorder. If this function is on, the DVD recorder will not allow playback of discs with a rating equal to or higher than the selected rating level. For example, if you select "PG-13", then playback of PG-13, R, and NC-17 rated movies will be blocked.



Please set the password before setting parental controls!

Password

The password menu allows you to set up passwords. In order to enter a new password, you will first need to enter the original password, and then your new password. Press **ENTER** to confirm.



The factory default password is "11911".

Factory Reset

Select this option to return all settings to the original factory defaults.

Disc Media

These functions work only on DVD+R or DVD+RW recordable discs. Please make sure that the correct disc is in the DVD recorder before selecting these settings.

Finalize: Finalize a DVD+R (see page 45).

Erase: Erases all of the information on a DVD+RW.

Record Speed

You can record discs using five different quality levels. See page 40 for more information on quality levels.

Auto Chapter

When **AUTO CHAPTER** is on, the DVD recorder automatically inserts chapters into DVDs that you record. These chapters appear approximately every five minutes. This allows you to jump to specific sections of your DVD more quickly. However, if you plan to set your own chapters, you should not record with **AUTO CHAPTER** on. You will still be able to add your custom chapters after recording, but you may need to take extra steps to remove the chapters inserted automatically.

The factory default setting for **AUTO CHAPTER** is "on".

Schedule

Use this menu to schedule recordings. See the "Recording Discs" section for information on using this feature.



See page 51
for a glossary of terms
used in this manual.

PREPARING DISCS FOR RECORDING

Compatible Discs

- **Recordable Disc Types**

This unit can record to DVD+R and DVD+RW discs. Please see "Disc Types" below.

- **Playable Disc and Media Types**

DVD Video	Commercial "Hollywood" DVD movies.
SVCD	Super VCD. A format for video saved on CD. Usually used in Asia.
DVD+RW	DVD format that can be "burned" repeatedly by some recorders.
DVD+R	DVD format that can be "burned" only once.
DVD-RW	DVD format that can be "burned" repeatedly by some recorders.
DVD-R	DVD format that can be "burned" only once.
CD-R	Recordable CD format often used for music.
CD-RW	Re-recordable CD format, also used for music.
Audio CD	Commercial music CD.
MP3	Format for compressed digital music on CD.
JPEG	Format for compressed digital photographs on CD or DVD.

We cannot guarantee that your recorded discs will play on another DVD player. Please check the manual for the other DVD player to make sure that it can play DVD+R and/or DVD+RW discs.

Although your DVD recorder can play DVD-R, music CDs, and MP3s, you can not use it to create these types of discs. You can only use it to record video – whether a TV broadcast or a home movie – to DVD+R or DVD+RW.

Disc Types

DVD+RW discs can be erased and copied over again, although this may reduce the quality of your recording. DVD+R discs cannot be copied over, and you cannot add new data to a DVD+R disc once it has been finalized (see the section "Editing Discs" starting on page 49).

You may not be able to record to a DVD+RW disc that already contains recordings from another DVD recorder or PC. If you are able to add a new recording to a disc from another DVD recorder, your recorder will rewrite the DVD menu. If the disc contains data from a personal computer, this data will be erased by your DVD recorder.

Initialize a New Disc

Your DVD recorder will automatically initialize a new DVD+R or DVD+RW disc the first time it is placed into the recorder. This takes about 1 minute, during which the TV screen shows READING. After the procedure is complete, the TV screen shows a blank title and indicates the recording capacity is 100%.

For more information on erasing discs or portions of discs, please see the section "Editing Discs" starting on page 43.

SCHEDULED DISC RECORDING

Scheduling a Recording

You can schedule up to 8 different programs with your DVD recorder.

1. Make sure that the correct time and date are set on your DVD recorder (see p. 36).
2. Place an initialized DVD+R or DVD+RW disc in the DVD recorder (see p. 38).
3. Press **SETUP** on your remote control to enter the setup menu. Use the **▲ ▼** buttons to highlight "Schedule", then press **ENTER** to confirm. A screen with the following information appears:

No.	mm/dd/yy	AM/PM	Start	AM/PM	Stop	Source	Speed
01	--/--/--	--	--:--	--	--:--	-----	----
02	--/--/--	--	--:--	--	--:--	-----	----
03	--/--/--	--	--:--	--	--:--	-----	----
04	--/--/--	--	--:--	--	--:--	-----	----
05	--/--/--	--	--:--	--	--:--	-----	----
06	--/--/--	--	--:--	--	--:--	-----	----
07	--/--/--	--	--:--	--	--:--	-----	----
08	--/--/--	--	--:--	--	--:--	-----	----

4. **Set the date for your recording:** Use the **◀ ▶** buttons to move the cursor to the date (mm/dd/yy) field, and use the **▲ ▼** buttons to select the date for your recording.
5. **Set the start time for your recording:** First use the **◀ ▶** buttons to move to the AM/PM field, and use the **▲ ▼** buttons to select whether your program begins in the AM or PM hours. Then use the **◀ ▶** buttons to move the cursor to the start field, and use the **▲ ▼** buttons to select the time that you want to start your recording.
6. **Set the stop time:** First use the **◀ ▶** buttons to move to the AM/PM field, and use the **▲ ▼** buttons to select whether your program ends in the AM or PM hours. Then use the **◀ ▶** buttons to move the cursor to the stop field, and use the **▲ ▼** buttons to select the time that you want to end your recording.
7. **Set the source:** Use the **◀ ▶** buttons to move the cursor to the source field, and use the **▲ ▼** buttons to select the source for your recording.
8. **Set the speed (quality):** Use the **◀ ▶** buttons to move the cursor to the speed field, and use the **▲ ▼** buttons to select the quality for your recording. More information about quality levels is included on page 40.
9. Press **ENTER** to confirm your settings.
10. When you are done, press **SETUP** again to leave the setup menu.
11. The system will display a warning message that tells you turn off the recorder in order to record your scheduled program. Please follow the instructions on screen.

Stop an In-Process Scheduled Recording

While the record is proceeding, press **STOP ■** to stop recording and go to DVD mode, or press **POWER** to stop recording and go to stand-by status.

scheduled disc recording

Recording Quality

You can record discs using five different quality levels. The higher the quality level, the more space (time) will be taken up on your disc. Press **QUALITY** on your remote to change the quality settings.

HQ (High Quality):	The best picture quality	60 min. / 1 hour
SP (Standard Play):	Excellent (DVD video) picture quality	120 min. / 2 hours
LP (Long Play):	Good (S-VHS) picture quality	180 min. / 3 hours
EP: (Extended Play):	Better than VHS quality	240 min. / 4 hours
SLP: (Super Long Play):	VHS picture quality	360 min. / 6 hours

Recording times are estimates, actual recording times may vary. Please note that if your source video is of low quality, then your final recording will be of low quality even if you select a higher quality recording level. Recording over previously recorded discs may also decrease the quality level.

Correct a Scheduled Recording

1. Press **SETUP** on your remote control to enter the setup menu. Use the **▲ ▼** buttons to highlight "Schedule", then press **ENTER** to confirm.
2. Use the **◀ ▶** buttons to move the cursor to the information that you would like to correct.
3. Press **ENTER** to select the information, and use the **▲ ▼** buttons to make changes.
4. Press **ENTER** again to confirm your changes, and press **SETUP** to close the setup menu.

Cancel a Scheduled Recording

1. Press **SETUP** on your remote control to enter the setup menu. Use the **▲ ▼** buttons to highlight "Schedule", then press **ENTER** to confirm.
2. Use the **◀ ▶** buttons to move the cursor to the number of the recording that you would like to cancel (e.g., 01, 02). This is in the first column.
3. Press **CLEAR** on your remote control.
4. Press **ENTER** again to confirm that you would like to cancel this scheduled recording, and press **SETUP** to close the setup menu.

Troubleshooting Scheduled Recordings

Your DVD recorder will not be able to perform the scheduled recording if:

1. No disc loaded.
2. The disc is write-protected.
3. The disc is not the correct format (DVD+R or DVD+RW).
4. The disc already contains 49 titles. This is the maximum number of titles that can be recorded to a single disc.
5. Another recording is in progress.
6. The DVD recorder's Time and Date is not set properly.
7. The time set for your recording is in the past.
8. The 8 memory slots for setting recordings are already filled.
9. There is no signal from the selected input source (it may be connected incorrectly or turned off).

The DVD recorder will not be able to tell if a disc is damaged. Even if the recording seems to be working, you may not be able to play back the disc if it has been scratched, smeared, or otherwise damaged.

MANUAL DISC RECORDING

1. Place an initialized DVD+R or DVD+RW disc in the DVD recorder (see p. 38).
2. Select the channel you want to record.
3. Press **MONITOR** on the remote to switch to external input mode.
4. Press **SOURCE** to select the input source that you want to record. Press **SOURCE** multiple times to cycle through the options: **CVBS1 > CVBS2 > S-VIDEO > CHANNEL**
5. Press **RECORD** on the remote control or the front panel of the DVD recorder to start recording.
6. Press **STOP ■** to stop recording. Please wait while the screen displays "WAIT." After 15 to 17 seconds, the screen displays "LIVE", and your recording is done.
7. Press **MONITOR** to switch to DVD mode. The recorded title will appear on the screen. Press **ENTER** to view your recorded video.

After recording, the following messages will also be stored:

- Record date and channel source.
- Record time.
- Recording length and recording mode.
- Recording index screen.



DVD+RW: These discs can be erased and recorded over.

DVD+R: These discs can be recorded and finalized only once. They cannot be erased and recorded over.

Pause recording

1. Press **PAUSE II** while recording to temporarily stop the DVD recorder from recording information. This may be useful for excluding sections that you do not want to record, such as TV commercials.
2. Press **PAUSE II** again to resume normal recording.

Chapters

Chapters can only be added after your recording has completed, not during the recording itself. Please see page 44 for more information about adding chapters.

recording from external devices

RECORDING FROM EXTERNAL DEVICES

You can record the signal from external devices, such as a VCR, video camcorder (V8, Hi8), or DVD player onto DVDs using your DVD recorder.

1. Please confirm the external device is properly connected to the DVD recorder. See the connection diagrams beginning on page 13 for more information.
2. Place an initialized DVD+R or DVD+RW disc in the DVD recorder (see p. 38).
3. Press **MONITOR** on the remote to switch to external input mode.
4. Press **SOURCE** to select the source for your recording .

Input (Internal Tuner)	Screen Display (Channel)
AV 1 IN	CVBS 1
AV 2 IN	CVBS2
S-VIDEO	S-VIDEO
ANTENNA	CHANNEL

5. Press **RECORD** to begin recording.
6. Press **STOP** ■ to stop recording. Please wait while the screen displays "WAIT." When "WAIT" disappears from the screen, your recording is done.
7. Press **MONITOR** to switch to DVD mode. The recorded title will appear on the screen. Press **ENTER** to view your recorded video.



The DVD recorder will stop recording automatically if there is no signal from the input device (such as a blank part of a videotape or an interrupted TV signal).

Recording from a DV Camcorder

1. Connect the red, yellow, and white AV output connectors from your DV camcorder to the AV input connectors on the front of your DVD recorder.
2. Place an initialized DVD+R or DVD+RW disc in the DVD recorder (see p. 38).
3. Turn on the DV camcorder and switch it to "VCR" mode.
4. Press **MONITOR** on the remote to switch to external input mode.
5. Press **SOURCE** to select the source for your recording .
6. Press **RECORD** to begin recording.
7. Press **STOP** ■ to stop recording. Please wait while the screen displays "WAIT." When "WAIT" disappears from the screen, your recording is done.
8. Press **MONITOR** to switch to DVD mode. The recorded title will appear on the screen. Press **ENTER** to view your recorded video.



Recording will stop automatically if there is no signal from the DV camcorder.



All recorded signals must be in DVD-SD format.

Date and time information can't be recorded from a DV camcorder.

You can't record copy-protected discs or one-time duplicable discs.

EDITING DISCS

Erase Whole Disc

(DVD+RW only)


Press **SETUP** to enter the setup menu. Select Disc Media, then Erase.

Erase One Title

(DVD+RW only)

Erasing a title can free up space on your DVD+RW.

1. Press **TITLE** on the remote control to enter the title menu. Use the **▲ ▼** buttons to select the title that you would like to erase.
2. Press **EDIT** on the remote control. The screen will display the following edit options:

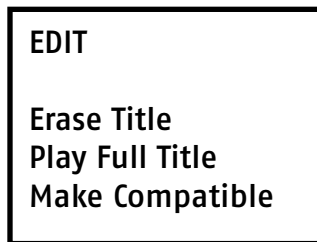


3. Use the **▲ ▼** buttons to select Erase Title and press **ENTER**. Wait approximately 15 seconds for the disc to be erased. "PLEASE WAIT" will be displayed on the screen while your disc is being erased.

Play Full Title

If there is a hidden chapter in a title, this feature can view all the contents.

1. Press **TITLE** on the remote control to enter the title menu. Use the **▲ ▼** buttons to select the title that you would like to view.
2. Press **EDIT** on the remote control. The screen will display the following edit options:

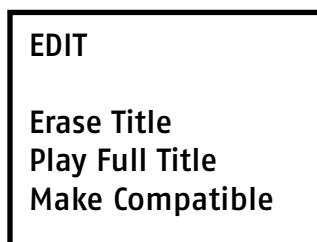


3. Use the **▲ ▼** buttons to select Play Full Title and press **ENTER**.

editing discs

Edit DVD Compatibility

If there is more than one edited title on disc, but it shows only one title when you try to play the disc, you must follow the following instructions to make the disc compatible.

1. Press **TITLE** on the remote control to enter the title menu. Use the **▲ ▼** buttons to select the title that you would like to play.
2. Press **EDIT** on the remote control. The screen will display the following edit options:

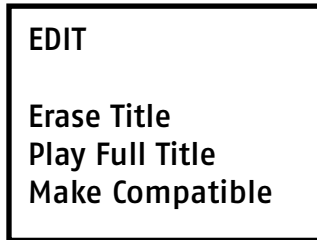

3. Use the **▲ ▼** buttons to select Make Compatible and press **ENTER**.




We can't guarantee that you can play your recorded DVD+R or DVD+RW on another DVD player. Check the instruction manual of the other DVD player in advance to confirm that it can play DVD+R or DVD+RW discs.

Insert Chapter

Use this feature to insert chapters into your DVD disc for easier navigation.

1. Play the title that you would like to split into chapters.
2. When you reach the point where you would like to insert a chapter, press **EDIT** on the remote control to show the edit menu.

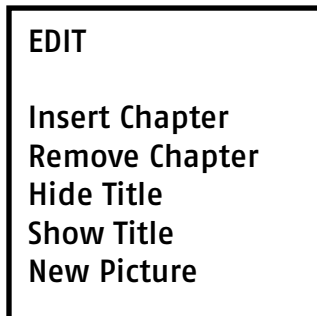

3. Choose Insert Chapter and press **ENTER** to add a chapter.

Remove Chapter

Chapter marks can be deleted after recording.

1. While a movie is playing, press **EDIT** to show the edit menu.
2. Choose "Remove Chapter" to delete the chapter mark for the currently playing chapter. Press **ENTER** to confirm.



You can not insert or remove chapters on a DVD+R that has been finalized.

Hide Title

You can hide titles on your disc so that they can be seen on the title menu, but not played.

1. While the title that you wish to hide is playing, press **EDIT** to show the edit menu.
2. Choose "Hide Title" and press **ENTER** to confirm.
3. Press **TITLE** to return to the title menu.

Show Title

This feature allows you to play a title that has been hidden.

1. Press **TITLE** to enter the title menu. Use the **▲ ▼** buttons to select the hidden title and press **EDIT** to bring up the edit menu.
2. Highlight "Play Full Title" and press **ENTER** to temporarily play the hidden title.
3. While playing a hidden title, "HIDDEN" shows on the top right corner of the screen.
4. Press **EDIT** again to show the edit menu.
5. Select "Show Title" and press **ENTER** to permanently "un-hide" the title.

New Picture

You can choose any frame in a title to use as the index scene for that title. The index scene is displayed on the title menu.

1. Play the title until the frame that you want to use as your index picture appears, then press **EDIT** on the remote control.
2. Select "New Picture" and press **ENTER**.
3. Press **TITLE** to return to the title menu. The title will show the new picture.

Finalize a DVD+R

This function allows a DVD+R disc to be played on general DVD players. A finalized disc can't be recorded with new content or revised.

1. Press **SETUP** to enter the setup menu and select "Disc Media".
2. Select "Finalize" and press **ENTER** to execute.
3. The screen displays the status of the finalization and the remaining time required.

The time required for this function depends on the disc type, length of the recorded content and the quantity of the titles.

TROUBLESHOOTING

This section includes possible solutions to common problems that you may experience with your DVD recorder.

Problem	Possible Cause	Solution
DVD recorder displays "HELLO" after the power is turned on, but no functions can be used.	Primary setup has not been completed.	Complete the primary setup before playback (see page 23).
No power, no signal.	Power cord is not properly connected to the power outlet.	Make sure the plug is properly inserted in the power outlet.
	TV is not correctly connected to the DVD recorder.	Refer to the connection drawings starting on page 13 to make sure that the TV is properly connected.
The unit turns off by itself.	Automatic power off function: the power is automatically turned off after 20 minutes have passed in stop mode.	Turn the power back on.
The disc tray can't be closed, or the disc tray comes out automatically after placing a disc in it.	Disc is not inserted correctly in the tray.	Take the disc out of the tray and replace it carefully.
	Disc is too dirty.	Clean the disc.
	Regional code of the disc is not correct.	Check the disc packaging to confirm the regional code is correct (see page 50).
No playback	Power is OFF.	Turn the power ON.
	No disc is inserted ("no disc" will be shown on screen).	Insert a disc.
	Disc is upside down ("no disc" is shown on screen).	Reload disk – the label side should face upward.
	Dirty disc.	Clean disc surface.
	Deformed disc.	Replace disc.
	Condensation in unit.	Turn power on for 1–2 hours before using the unit.

Problem	Possible Cause	Solution
Unwanted mosaic-like display during playback.	Poor disc.	Replace disc.
	Video CD (MPEG1).	Playback with DVD format.
No sound.	DVD player is set to slow or fast playback.	Press PLAY to resume normal playback.
	Audio terminals are not connected.	Check audio connections (see pages 14–16).
	TV volume is too low.	Adjust TV volume.
	Wrong AUDIO OUTPUT setting.	Check AUDIO OUTPUT settings (see page 36).
No video/picture.	TV is not connected properly.	Check video connections (see pages 13–17).
	Wrong setting for VIDEO OUTPUT.	Press SETUP and check the Video Output settings (see page 35).
Remote control does not work.	No batteries in remote control.	Put in new batteries (see page 20).
	Dead batteries.	Replace batteries (see page 20).
	Remote control not being pointed at the remote sensor.	Point the remote control at the remote sensor (see page 20).
Does not play, even when a title is selected.	Prohibited by the parental controls.	Confirm the parental controls setting (see page 36).
Can not play a disc recorded on this DVD recorder on another DVD player.	Disc is not finalized.	Finalize the disc (see page 45).
	Disc is one-time only.	If a disc is recorded with content which is available to be copied one time only, it can't be played on another DVD player.
	Other DVD player can not play DVD+R or DVD+RW discs.	Check the manual of the other DVD player.
	Other DVD player can not calibrate because disc has too little data.	Try a disc with a larger amount of video data recorded to it.

troubleshooting

Problem	Possible Cause	Solution
Unit doesn't record.	Disc is full.	Confirm the available space on the disc.
	Source disc is copy-protected.	Confirm the recording source has no copyright protection.
	Power interruption during the recording.	None.
	There are 2 scheduled recording programs running at the same time.	Check the recording schedule and cancel one of the scheduled recordings (see page 39).
	Disc format is not correct.	This DVD recorder can record only to DVD+R or DVD+RW discs (see page 38).
Audio or subtitle language is not the one selected during the initial setup.	The selected language does not exist in the disc.	Select another language using AUDIO , SUBTITLE or the DVD menu.
Menus are in the wrong language.	Wrong language set for OSD.	Check the OSD language setting (see page 34).
Audio or subtitle language can not be changed.	The disc contains only one language.	Check the disc language contents.
	Some discs only allow the audio and subtitle language to be set in the DVD menu – not with the AUDIO and SUBTITLE buttons on the remote control.	Press the MENU button on the remote control to access the DVD menu.
The video image brightness fluctuates during playback.	The DVD recorder is connected to the television via a VCR.	Connect the DVD recorder directly to the TV, bypassing the VCR.
Cannot fast scan during playback of DVD movie.	Some discs may have sections which prohibit skip or scan operations by users.	None.
Edited titles/chapters do not show up when played on another DVD player	Disc has not been made compatible.	See page 44 for instructions on making a disc compatible.

troubleshooting

Problem	Possible Cause	Solution
Scheduled recording did not work.	No disc loaded.	Prepare and load a recordable disc.
	The disc is write-protected.	None.
	The disc is not the correct format (DVD+R or DVD+RW).	Replace with a disc that is the correct format (see page 38).
	The disc already contains 49 titles.	This is the maximum number of titles that can be recorded to a single disc (see page 43 for deleting titles).
	Another recording is in progress.	Stop the recording in progress (see page 39).
	The DVD recorder's Time and Date is not set properly.	Set the time and date (see page 36).
	The time set for your recording is in the past.	None.
	The 8 memory slots for setting recordings are already filled.	Cancel a scheduled recording (see page 39).
	There is no signal from the selected input source.	Check the connections and make sure that the external device is on.
Video appears on screen, but flickers, fades or is distorted	DVD recorder is in PAL mode.	Press the NTSC/PAL button on the remote control to switch to NTSC or NTSC Progressive Scan mode (see page 32).

ADDITIONAL INFORMATION

Regional Code

This DVD recorder is designed and manufactured to respond to the Region Management Information recorded on a DVD disc. If the region number described on the DVD disc does not correspond to the region number of this DVD recorder, this DVD recorder will not play the disc. The OSD message "WRONG REGION" will show on the TV screen. This recorder will play DVD discs made for "ALL" regions, as well as DVD discs made for Region 1. The illustration below shows the regions and corresponding region numbers.

- Region 1 USA & Canada
- Region 2 Europe, Japan, South Africa, Middle East
- Region 3 Southeast Asia
- Region 4 Central & South America, Australia, New Zealand
- Region 5 Former Soviet Union, India, Pakistan, Africa
- Region 6 China

Technical Specifications

Technical specifications subject to change without notice.

Power Supply: AC100–240 V, 50/60 Hz
Power Consumption: 30W
Weight: 9 lb.
Dimensions: (W x D x H): 17"x11.5"x2.75"
Operating temperature range: 41°F to 104°F
Operating humidity range: 5 % to 90 % (without condensation)

Video System

Composite Video Terminal
Y output level: 1 Vp-p (75 Ω)
CB output level: 0.525 Vp-p (75 Ω) (75% Color)
CR output level: 0.525 Vp-p (75 Ω) (75% Color)

S-Video Terminal
Y output level: 1 Vp-p (75 Ω)
C output level: 0.286 Vp-p (75 Ω) NTSC

Video Terminal: 1 Vp-p (75 Ω)

Horizontal Resolution: More than 500 lines
S/N Ratio: More than 60 dB

Audio Parameters
Frequency Response: 20Hz ~ 20kHz
Dynamic Range: Over 90 dB
S/N Ratio: Over 90 dB
Output level: 2 Vrms

Glossary

Chapter: Chapters are sections of titles. Not every title has chapters.

Component Interlace: A very high level of video output that displays alternate lines of a video frame on each pass (e.g., even lines, then odd lines).

Component Video: A high-end video signal that is supported by most DVDs but very few TVs. Component video connectors are usually red, green, and blue.

Composite Video: An analog video signal that is also called CVBS. Most televisions and VCRs have a composite video connector, which is usually yellow.

Dolby® Digital: A digital surround-sound format designed by Dolby Laboratories, Inc.

DTS® Digital Surround: A digital surround-sound format by Digital Theater Systems.

D-PCM: The same type of format that CDs are usually recorded in. Use D-PCM for digital sound output in stereo (two channel) as opposed to surround sound.

DVD+R: A recordable DVD format. DVD+R discs can not be recorded over. You can not add recordings to a DVD+R disc that has been finalized.

DVD+RW: A recordable DVD format. You can record over erased sections of a DVD+RW disc.

DVD-R / DVD-RW: A recordable DVD format. Your DVD recorder can play DVD-R or DVD-RW discs, but it can NOT record to them.

DVD-RAM: A recordable DVD format. Your DVD recorder can NOT play or record DVD-RAM discs or cartridges.

JPEG: JPEG is a type of compression used for still pictures. A digital photo is sometimes referred to as a "JPEG" as this is the most common type of format for digital images.

MPEG: MPEG is a type of compression for video. There are different types of MPEG.

MPEG 1 is generally used for VCDs. MPEG 2 is used for DVDs and digital TV, and is higher quality than MPEG 1.

MP3: MP3 is a type of compression used for music files.

NTSC: The TV color format used in North America.

PAL: The TV color format used in Europe and other parts of the world.

Pan & scan: A way of reformatting widescreen movies to fit a standard 4:3 television screen by cropping the sides of the video.

PBC (Playback Control): Used on some VCDs and SVCDs to allow menus similar to a DVD menu. It will be easier to control playback with your remote control if PBC is set to "off". See page 32.

Progressive Scan: Currently the highest level of video output, it displays all of the lines of a video frame in one pass (see Component Interlace above).

Surround Sound: A combination of multiple-channel audio signal and multiple-speaker systems that produces theater-like sound, giving the impression of being seated live at the center of events.

SVCD: A disc format for putting DVD-quality video on CD.

S-Video: A video signal that is higher quality than composite video, but not as good as component video. Many TVs have S-Video inputs (which may also be labeled Y/C).

Title: The main unit for video discs. Usually an entire movie or TV program. A title is divided into chapters.

Toslink: Another name for an optical digital audio connector.

VCD (Video CD): A disc format for video on CDs. Less capacity (and therefore lower quality) than DVDs.

WARRANTY

MEDION warrants to our customers that this product is free from defects in materials and workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or a defective product returned to a MEDION repair facility or a MEDION Authorized Service Facility ("ASF") for such product, as applicable, and proven to be defective upon inspection, will be exchanged for new or comparable rebuilt parts, or a refurbished product, as determined by the MEDION repair facility or the ASF.

Limited warranty repair or replacement shall not extend the original limited warranty period of the defective product. This limited warranty does not cover any supplies or accessories.

EXCLUSIONS: this limited warranty does not apply, and you will have no remedy hereunder with respect to (a) products that have been modified, opened, repaired or otherwise altered, except by MEDION or an ASF, (b) products that have been damaged or destroyed after delivery to the customer, (c) any third party software, interfaces, parts, supplies, peripherals or other products or any defects resulting from use of the product in connection with such third party products, (d) defects resulting from improper or inadequate maintenance, calibration or site preparation, (e) defects resulting from any misuse, abuse, accident, neglect, negligence or any use other than in accordance with the handling or operating instructions provided by MEDION, (f) defects resulting from exposure to unusual physical or electrical stress or from any operation other than in accordance with the published environmental specifications for the product.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND MEDION SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND NO IMPLIED WARRANTY APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE. Some countries, states or provinces do not allow exclusions or limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This limited warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.

MEDION's limited warranty is valid in any country or locality where MEDION has a support presence for this product and where MEDION has marketed this product. The level of warranty service you receive may vary according to local standards. MEDION will not alter form, fit or function of the product to make it operate in a country for which it was never intended to function.

TO THE EXTENT ALLOWED UNDER APPLICABLE LAW, THE REMEDIES IN THIS LIMITED WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL MEDION OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST MEDION BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY MEDION WHICH CAUSED THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF MEDION. Some countries, states or provinces

do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT AS LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Please note the following:

Be sure to keep your purchase receipt in a safe place. MEDION, at its option, may require a copy of the receipt to validate the warranty period effective date (i.e. date of purchase). Warranty liability only applies to material or factory faults. It does not apply to damage due to breakage, for example, a crack in the housing. Our service includes unit exchange or send-in repair:

Unit Exchange

In locations where Unit Exchange is available, MEDION will send you a replacement product. You must return the defective product to MEDION (using the shipping carton that the new one came in.)

Send-In Repairs

In locations where Send-In Repair Service is available, repair service can be obtained by shipping your product to the MEDION Repair Center. The product will be repaired and returned to you.

Replacement products may be either new or equivalent in performance to new. MEDION replacement or repaired products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

Out-of-Warranty Support

In addition to providing free technical support during the warranty period, MEDION is also available to support your product after the warranty period has ended. This out-of-warranty support will be provided on a fee basis.

Medion USA, Inc.
1001 Bayhill Dr., Ste. 155
San Bruno, CA 94066

www.medion-usa.us

(866) 633-4660